



⚠ Warnings

- » Fill the trap with water before firing the boiler to prevent exhaust fumes from entering the room. Never operate the boiler unless the trap is filled with water.
- » Ensure all trap fittings are tightened to prevent leakage of flue gas.

i Notes

- » Pipe condensate drain within 1" of a drain or connect to a condensate pump.
- » Slope the drainage line down to the drain at a pitch of $\frac{1}{4}$ "/Ft, so that the condensate runs towards the drain.
- » Checking, cleaning, and filling the condensate trap every 2 months is important.

